 





Quick Start Guide

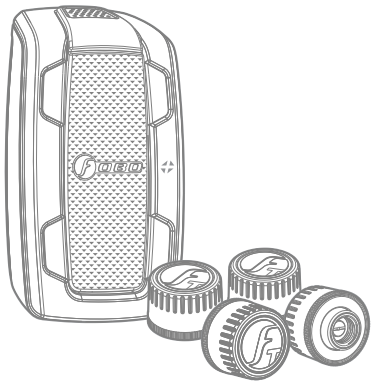

PICTURES SHOWN ARE FOR ILLUSTRATION PURPOSE ONLY


FOBO Tire 2 system comprises:

 - 1) FOBO Tire 2 App to display the pressure & temperature readings on your smartphone.

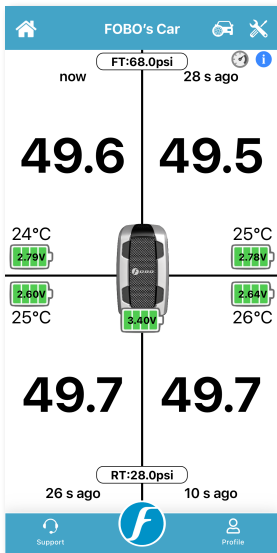


FOBO Tire 2 system comprises:

- 2) In-car unit to indicate the individual tire position status with red LED and alert sounds.

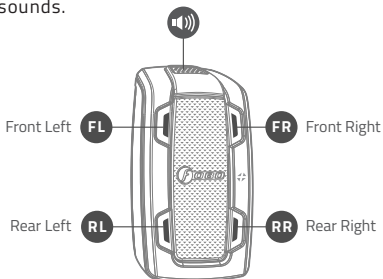


- 3) 4 x FOBO Tire 2 sensors to measure pressure and temperature in real time. Wirelessly transfer data to in-car unit and smart device.

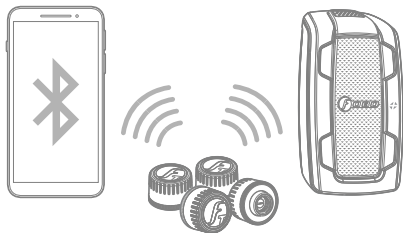

1

Download FOBO Tire 2 App onto your smartphone from Google Play Store (Android) or App Store (iOS).

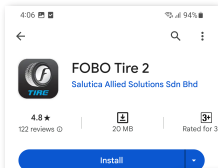


About this app

Smart Bluetooth tire pressure monitoring

Tools

Data safety

Safety starts with understanding how data is collected and shared. Data privacy and security practices may vary based on your region and age. The developer provided information and may update it over time.

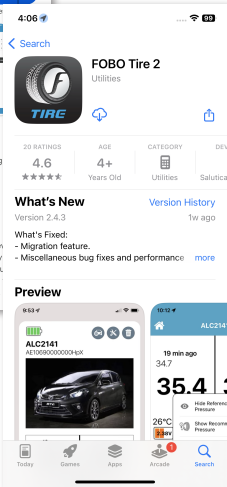

2

Ensure the Bluetooth, Location service and Internet connection on your smartphone is turned on.

3

Open FOBO Tire 2 App and sign in using your preferred email address or sign in using your Facebook or Google account.



Welcome to FOBO Tire 2

Please enter your login credentials.

 Email

 Password



LOGIN

OR



Sign in with Google



Sign in with Facebook

[Forgot Password?](#)

Don't have an account? [Create](#)

4


Allow all the permissions prompted by the App.

5

Press Add + button on the FOBO Tire 2 App home page to start installation.




6

Open in-car unit battery cover and remove the battery tab, press side button on the in-car unit until hear a beep sound and LED flashing at top centre of the in-car unit. Follow on screen instructions to set up the vehicle profile and click save. 



7

At your vehicle, install one sensor at a time. Unscrew sensor cover FR, remove battery tab, screw back the sensor cover and screw sensor on the tire valve FR. Continue with sensor RR, RL and finally FL.

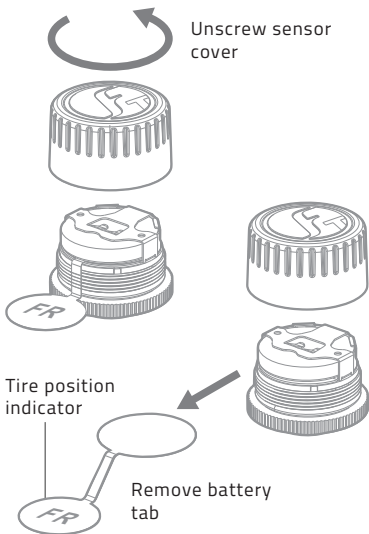

To install FOB0 Lock-Nut:

1. Screw on FOB0 Lock-Nut on the tire valve with 'bump' facing inward until the end of the valve thread.
2. Screw on FOB0 Tire 2 sensor to the tire valve securely.
3. Turn the FOB0 Lock-nut counter-clock wise as though you are removing it until it meets the FOB0 Tire 2 sensor.
4. Hold on to the FOB0 Tire 2 sensor and use the provided wrench to further tighten the FOB0 Lock-Nut against the FOB0 sensor. This is to avoid the twisting of the rubber valve.

Note: Gently tighten the Lock-Nut against the sensor; no excessive force is required.

To Release FOB0 Tire 2 system from your smartphone:

1. Long press (For Android) and swipe from right to left (For iOS) on the desired vehicle profile which you would like to release.
2. Press delete, vehicle profile will be removed from the App.

Note: Please ensure that you have good internet connection while performing the release.



Please download the complete user manual from
www.my-fobo.com