

Quick Start Guide



PICTURES SHOWN ARE FOR ILLUSTRATION PURPOSE ONLY



Download FOBO Bike 2 App onto your smartphone (Google Play Store (Android) or App Store (iOS)).





Ensure the Bluetooth, Location service and Internet connection on your smartphone is turned on.



Open FOBO Bike 2 App and sign in using your personal email address or sign in using your Facebook or Google account.

Velcome to FOBO Bike 2 Please enter your login credentials.		
Email		
Password O		
LOGIN		
or		
G Sign in with Google		
f Sign in with Facebook		
Forgot Password? Don't have an account? Create		



Allow all the permissions when prompted by the App.



Press Add Bike "+" button on the FOBO Bike 2 App home page to start installation for a new bike.





Select Bike type and key in the other details, press SAVE icon 💾 to save the profile settings.





Unscrew sensor cover to remove battery tab. Then, screw back the sensor cover and ensure it is tightened.





Follow the on-screen instructions and install the sensors to the tire valves accordingly.

	*	
	9	
Not Installed		
Install Sensor (RT)		
1. Screw sensor on the Rear Tire position. 2. Touch sensor with your mobile. 3. Press 'Proceed'.		
If sensor is installed, remove it first, and repeat step 1-3.		
	SKIP PROCEED	
Not Installed	T	
	D <u>e</u> Profile	

To install FOBO Lock-Nut:

- Screw on the FOBO Lock-Nut to the tire valve with 'bump' facing inward until the end of the valve thread.
- 2. Screw on the FOBO Bike 2 sensor to the tire valve securely.
- 3. Turn the FOBO Lock-nut counter-clock wise as though you are removing it until it meets the FOBO Bike 2 sensor.
- Gentle hold the FOBO Bike 2 sensor and use the provided wrench to further tighten the FOBO Lock-Nut against the FOBO sensor. This is to avoid the twisting of the rubber valve.

Note: Gently tighten the Lock-Nut against the sensor; no excessive force is required.

To Release FOBO Bike 2 sensor from your smartphone:

- Open the intended bike profile and long press on the tire position which you would like to release.
- 2. A dialog box will appear, press on Release sensor option.
- 3. Perform the same steps (1-2) to release the other sensors from your account.

Note: Please ensure that you have good internet connection while performing the release.



Please download the complete user manual from www.my-fobo.com