



Quick Start Guide



PICTURES SHOWN ARE FOR ILLUSTRATION PURPOSE ONLY

1

Download FOBO TPMS App onto your smartphone. It is available on both the Google Play Store & the App Store.



FOBO TPMS

2

Ensure that Bluetooth, Location services, and Internet connection are turned on in your smartphone settings.

3

Open the FOBO TPMS App and sign in/signup using your personal email address, or sign in via Google account.




4

Allow all permissions requested by the App.

5

To install FOBOT BIKE LITE sensor, press the plus (+) button in the middle of the screen.

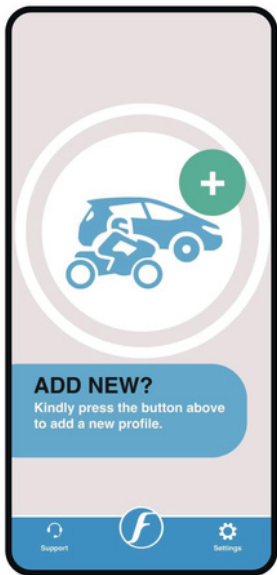

6

This screen will prompt you to select the product type. Choose "FOBO Bike" and press the "Next" button.

Select Product Type



FOBO Tire



FOBO Bike



FOBO Cycle

Suitable for Motorbikes, Trikes and Quadbikes. Select this type if you have purchased **FOBO Bike** or **Trike** set.



Cancel

Next

7

On the "Profile Creation" screen, select the installation type. Note that there are two types of FOBO Bike products. Select "**FOBO BIKE LITE**" and press the "Next" button.

Profile Creation

**Status (0%)**
Preparing...

Installation Type

Please select the installation type. If the purchased product came with a QR Code, select the "FOBO Bike Lite" option.





Press "Next" to proceed to the next stage.

Cancel

Next

8

You will be prompted to scan the QR code located to the product box. Scan the QR code, and the app will automatically proceed to the next screen.

However, should you lose the product box (along with the QR code), press the "Skip" button and manually install the 2 sensors one by one.



9

Enter a profile name (or vehicle name). Optionally, you can also set a vehicle photo.

After entering the profile name, press the "Next" button.

Profile Creation

**Status (50%)**
Setting up...

Profile Name



Profile Name

Enter your profile name and set your vehicle photo (optional).

Next

10

Enter the recommended tire pressure settings. After setting the pressure, press the "Next" button.

Profile Creation

**Status (70%)**
Setting up...

Pressure Settings




Tire Position	Min	Rec	Max
Front Tire (FT)	180	200	250
Rear Tire (RT)	180	200	250

Set your vehicle recommended tire pressure or accept the default settings above.

Next

11

Install each sensor on the tire that matches the position shown on its label. To install a sensor, unscrew sensor cover to remove battery tab. Then, screw the sensor cover back on, ensuring it is tightly secured.

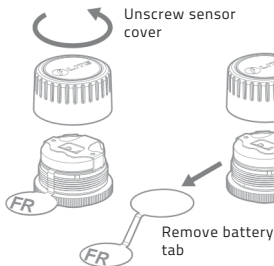

Prior to installing sensors on tire valve, install FOB0 Lock-Nuts to secure a sensor.

 
To install FOB0 Lock-Nut:



OPTIONAL FOR EXTRA SECURITY

1. Screw on the FOB0 Lock-Nut to the tire valve with 'bump' facing inward until the end of the valve thread.
2. Screw on the FOB0 TIRE LITE sensor to the tire valve securely.
3. Turn the FOB0 Lock-nut counter-clock wise as though you are removing it until it meets the FOB0 TIRE LITE sensor.
4. Gentle hold the FOB0 TIRE LITE sensor and use the provided wrench to further tighten the FOB0 Lock-Nut against the FOB0 sensor. This is to avoid the twisting of the rubber valve.


Note: Gently tighten the Lock-Nut against the sensor; no excessive force is required.



Note: It is recommended to apply some soap water (on the tire valve installed with FOB0 sensor) after installing a sensor in order to check for any potential leak. Once all sensors are installed, press the "Finish" button to complete the setup.

13

Your installation is now complete !
You should now be able to see the sensor readings for each tire on the app's main screen.

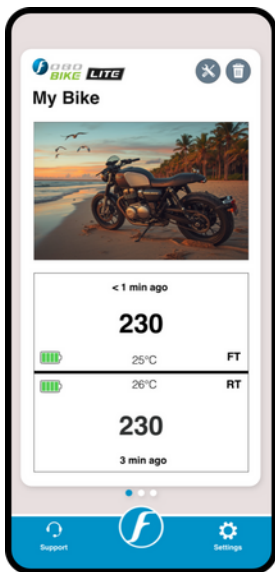



www.my-fobo.com