



i

T-Valve Installation Guide

Rev. 1.0

JOBO




Contents

		Page
•	T-Valve part list	1
•	T-Valve assembly for wheel with valve hole diameter 11.3mm	2-3
•	T-Valve assembly for wheel with valve hole diameter 8.3mm	4-5





T-Valve Part List

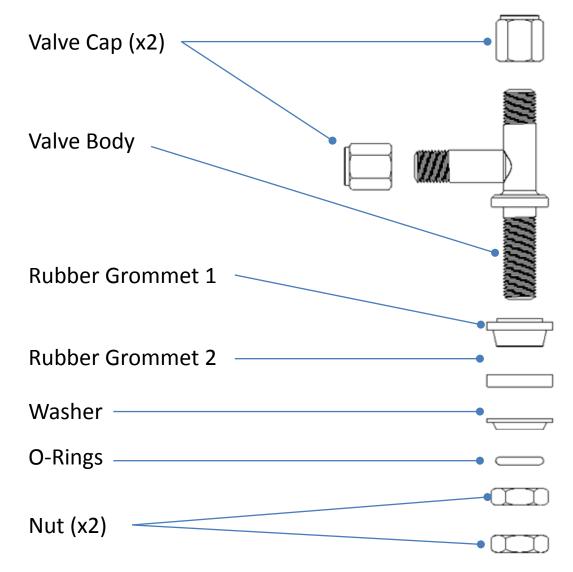



INSTALLATION for wheel with valve hole diameter 11.3mm

1. Unlock two Nuts, remove O-Ring, Washer and Rubber Grummet 2 from Valve body

2. With Rubber Grummet 1 at Valve Body, Insert Valve Body into Rim valve hole

3. Insert Rubber Grommet 2 into Valve body and follow by Washer

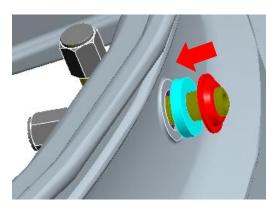

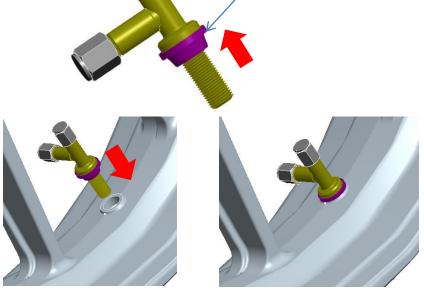

Rubber Grommet 1











4. Lock it tight by two Nuts; but tighten one nut after the other.

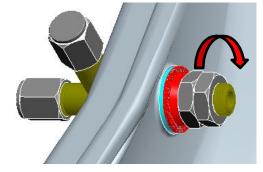

5. Remove Valve Cap and installFOBO Sensor (Please follow FOBOTPMS series installation guide)

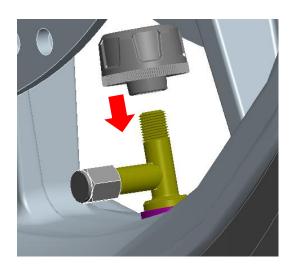

Bike Sport Rim



Car Sport Rim


080




INSTALLATION for wheel with Diameter 8.3mm valve hole

 Unlock two Nuts, remove all and insert
O-Rings back into Valve body

2. Insert Valve Body into rim valve hole

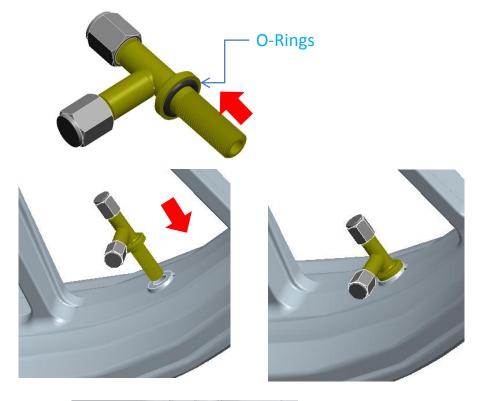


3. Insert Rubber Grommet 2 into Valve Body and follow by Washer

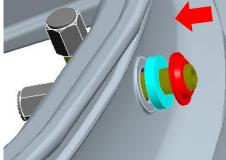






4. Lock it tight by two Nuts; but tighten one nut after the other.

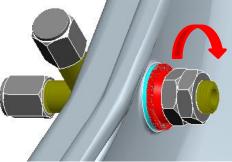

5. Remove Valve Cap and installFOBO Sensor (Please follow FOBOTPMS series installation guide)

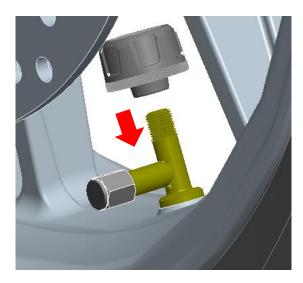

Bike Sport Rim

